

# Die size

You can specify how the software will size the die in your job. You can have Pandora use a bounding box based on all lines in the die, all die stations in the die, or a line type that you specify.

1. Select **Pandora > Preferences** (Macintosh) or **Edit > Preferences** (Windows).
2. In **Preferences**, select the **Die Settings** tab.
3. In the **Size Based On** area, select one of the following options:
  - a. **All lines in die file** to base the die size on the outermost lines in the die.
  - b. **All die stations** to base the die size on the all the stations in the die.
  - c. **Line type** to specify a line type to use to size the die.
4. Click **OK**.