

# Placing objects using gap line measurement

1. If **gap line between placement** measurement distances are not showing, enable the option in **Preferences > General tab** in the **Measurements** area.
2. To select the object, click it.  
The gap lines will show between objects on the layout.
3. Click the line for the distance that you want to change.
4. Double-click one of the selected line's arrowheads.
5. In the **Enter new distance** window, type the new distance measurement.
6. Click **OK**.  
The object will move based on the new distance that you entered.