

# Replacing existing flexo plate using Auto Sized Flexo Plate

**Important:** The settings in [Preferences > Automatically Sized Substrates > FlexoPlate](#) must already be configured. When this selection is used, the other Auto Sized Substrate options are cleared and inactive.

1. Drag a new substrate from the **ShopMap** palette into the job.  
A warning appears: There is already a substrate in the job. Do you want to replace it?
2. Click **Replace**.  
The Create Plate dialog box appears.
3. In the Replace Plate dialog, perform these actions in the **Height and Width** area:
  - a. If you do not want to accept the defaults, type the dimensions of the plate required.
  - b. In the **Units** list, select millimeters, centimeters, or inches.
4. Click **Yes**.  
The new flexo plate replaces the existing flexo plate on the layout.

**Note:** If a Press has been attached to the substrate, there will be a warning message: Auto Flexo Plate selected, but a Press has been attached to substrate. All Press offsets will be ignored.