

# Bleed path

You can edit bleed settings in **Preferences** or in the **job properties > Die Attributes** area to specify not only the size of the bleed margins, but also, in cases where the Pandora software does not bleed correctly on the first attempt, to modify parameters and have the software generate bleeds again.

1. Select **Pandora > Preferences** (Macintosh) or **Edit > Preferences** (Windows).
2. In **Preferences**, select the **Die Settings** tab.
3. In the **Bleed Margins** box, type a size for the bleed margins.