

Calibrating the punch location

Before using an output device that you added to the **ShopMap** palette, you may need to calibrate the punch setting for each size of film and plate to be output by this device to ensure proper placement of the image. The **ShopMap** palette controls for calibration become available when you have an output device and a media size that are supported for that device on the **ShopMap** palette. Custom media sizes are available only for devices that support custom media.

Begin calibrating by printing an orientation test, then a punch test. The orientation test is available only for custom media sizes (media sizes that are not defined in the PPD).