

4. If you expect to use this particular step-and-repeat operation again, you can save the number of repeats, the position settings, and the distance or gap measurement as your job defaults by clicking **Save as Default**. If the current default settings are more appropriate, skip this step. **Note:** You will typically want to save **Gap** parameters as default settings. Saving **Distance** as the default setting and then using a different sized artwork may cause the artwork to overlap or have significantly large spaces between repeats.
5. If you want to dynamically update the placements in the **layout** view to see your step-and-repeat layout, select the **Apply Changes Immediately** check box.
6. Click **OK**.
The object is stepped and repeated in the **layout** view, and the step-and-repeat appears

in the **Content** area of **job properties**.

