

## Adding an output device to the ShopMap palette

Add an output device to the **ShopMap** palette by typing information and selecting settings and connections in the New Output Device dialog box. If the device has a punch, you also need to calibrate the device for each plate and film size you plan to use.

When you add an output device to the **ShopMap** palette, two items are listed in the palette: the nickname you gave the device when you added it, and **Default**, which is the default settings for the output device. You can add the same output device multiple times, each time giving it a different nickname and applying different settings. Each of these instances of the output device is called a profile.

In the case of a press that also allows direct printing, such as Heidelberg Direct Imaging, you need to add the device to the **ShopMap** palette as both a press and an output device.