

# Deleting items from a job

1. Select the name of the item to be deleted from the job from the list on the **Content** tab or **Materials & Equipment** tab of **job properties**.
2. Press Delete.

The item is completely removed from the job. If you want to use it later, you need to import it or drag it to the job from the **ShopMap** or **Marks** palette.